

CertainTeed 

**Snap
Wrap™**
Transforms wood posts in a snap!

STEP-BY-STEP INSTALLATION INSTRUCTIONS FOR SNAPWRAP™

Assembly for: 4 x 4 and 6 x 6 post wraps

Virtually Maintenance Free | Lifetime Limited Warranty

BEFORE YOU BEGIN

HELPFUL HINTS

Read these instructions thoroughly before beginning the assembly.

- Use carbide-tipped multi-purpose blade for cutting.
- Do not lay vinyl components on abrasive surfaces.
- If any components are missing or defective, please call us at: **800-333-0569**

TOOLS REQUIRED


Chop/mitre saw –
with carbide-tipped multi-purpose blade
Tape measure
Pencil
Hammer
Siding snips

TIPS


- Make sure you have all the pieces you need to complete the job.
- Don't forget - if using SnapWrap trim on the top and bottom of the post, notch out the SnapWrap and shorten corner pieces.
- For undersized posts, screws are included to secure SnapWrap panels to the post.
- Silicone adhesive may also be used to secure corners to the SnapWrap panel with undersized posts and high wind conditions.

IMPORTANT:

ALWAYS WEAR SAFETY
GLASSES WHEN CUTTING AND
DRILLING VINYL/ALUMINUM
RAILING PRODUCTS.

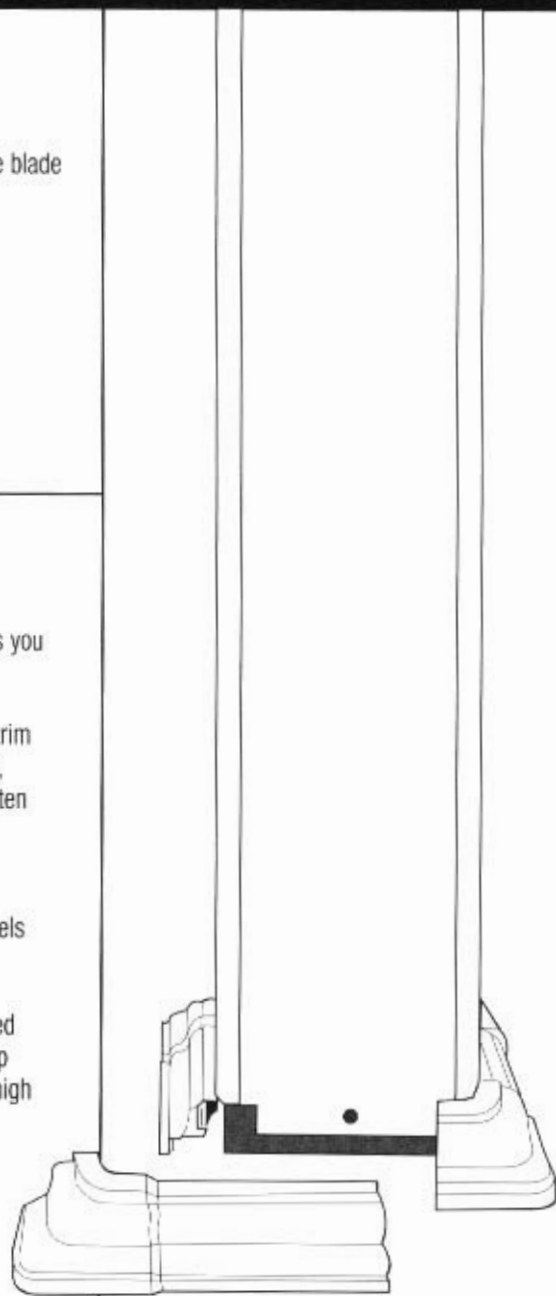

ASSEMBLING SNAPWRAP™

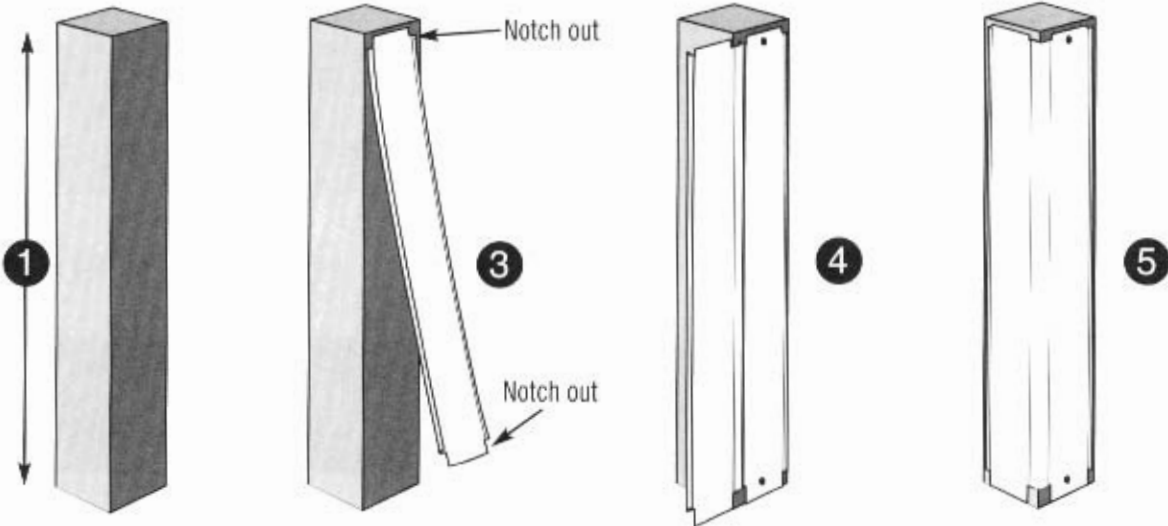

Step 1: Measure the post to be wrapped.

Step 2: Measure the post wrap panels and cut to length; repeat step with corner pieces.

Tip: If using trims at top & bottom, notch out corners of SnapWrap panels and shorten corner pieces.

Step 3: Place first post wrap panel against post.

Step 4: Place first corner piece over one corner of post wrap.

Step 5: Install second post wrap panel into first corner piece.

Step 6: Install third post wrap panel into second corner piece.

Step 7: Install fourth post wrap panel into third corner piece.

Step 8: Snap fourth corner piece over remaining corner of post.

Step 9: Assemble 4-piece post trim at top of post, snap together and position to ceiling.

Step 10: Assemble 4-piece post trim at bottom on floor and snap together.

ASSEMBLING SNAPWRAP™ TRIM ACCESSORY




6



7



8

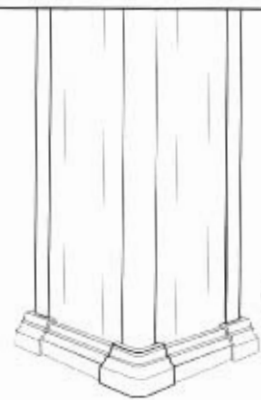

10